


Total Maximum Daily Load (TMDL)

- See <u>lecture #38</u>, extra topic
- Definition (from DEP Website):
 - "A TMDL is the greatest amount of a pollutant that a waterbody can accept and still meet water quality standards for protecting public health and maintaining the designated beneficial uses of those waters for drinking, swimming, recreation, and fishing. A TMDL is implemented by specifying how much of that pollutant can come from point, nonpoint, and natural sources."
 - "The TMDL provisions require states to identify and list waterbodies that are threatened or not meeting water quality standards despite controls on point source discharges."
- For MA studies see DEP website
 - http://www.mass.gov/eea/agencies/massdep/water/watersheds/total-maximum-daily-loads-tmdls.html

David A. Reckhow CEE 577 #8

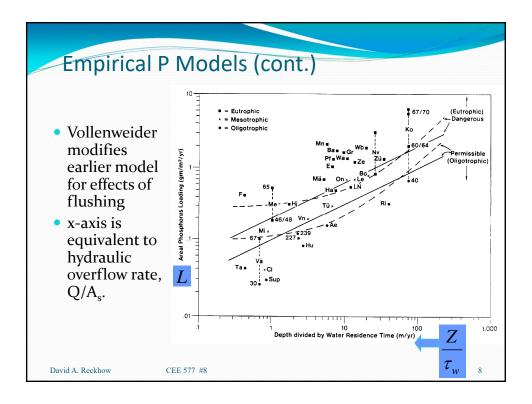

Simple Lake P Model

 This model is based on a simple mass balance with terms for loading (W), settling, and outflow. There is no spatial, or temporal resolution

$$V\frac{dP}{dt} = W - v_s P A_s - QP$$

• Dividing both sides by the surface area (A_c) gives:

$$H\frac{dP}{dt} = L - v_s P - q_s P$$

• where, H is the lake depth, L is the areal loading (W/A_s) and q_s is the overflow rate (Q/A_s) . At steady state (dP/dt = 0), the solution becomes:

$$P = \frac{L}{v_s + q_s}$$

David A. Reckhow

CEE 577 #8

Simple Lake P Model (cont.)

Based on data from 47 northern temperate lakes included in EPA's
National Eutrophication Survey, the settling velocity (in m/yr) was found
to be an empirical function of the overflow rate[1]:

$$v_s = 11.6 + 0.2q_s$$

• so substituting this into the steady state model above, we get:

$$P = \frac{L}{11.6 + 1.2q_s}$$

[1] From: Reckhow, 1979 [JWPCF 51(8)2123-2128] "Uncertainty Analysis Applied to Vollenweider's Phosphorus Loading Criterion"

David A. Reckhow

CEE 577 #8

Simple Lake P Model (cont.)

 $P = \frac{L}{11.6 + 1.2q_s}$

- where:
 - P = mean annual total phosphorus concentration (g-P/m³ or mg-P/L)
 - L = mean annual areal phosphorus loading $(g-P/m^2-yr)$
 - q_s = mean annual areal water loading or overflow rate (m/yr) = Q/ A_s
- This model was developed from lakes with the following characteristics
 - phosphorus concentrations in the range of o.oo4-o.135 mg/L
 - phosphorus loadings of 0.07-31.4 g-P/m²-yr
 - overflow rates of 0.75-187 m/yr.
- It should not be used for lakes whose characteristics are outside of this range.

David A. Reckhow

CEE 577 #8

11


Simple Lake P Model (cont.)

• When used properly, the log transform of the model has an estimated error (s_{mlog}) of 0.128. This value was determined from comparison of observed and predicted phosphorus concentrations in the 47 lakes. Therefore, considering error, the model can be written as:

$$L = (11.6 + 1.2q_s) \left[10^{\log(P) \pm s_{m \log}} \right]$$

David A. Reckhow

CEE 577 #8

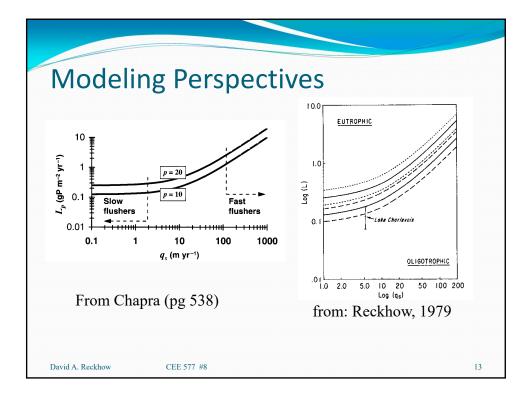

Determination of Areal Water Loading (overflow rate)

- $q_s = Q/A_s$
- If Q is not directly measurable from inflow or outflow, then it can be estimated from:
 - $Q = (A_d x r) + (A_s x Pr)$

where: $q_s = \text{ areal water loading (m/yr)}$ $Q = \text{ inflow water volume to lake (m}^3/\text{yr})$ $A_d = \text{ watershed area (land surface) (m}^2)$ $A_s = \text{ lake surface (m}^2)$ r = total annual unit runoff (m/yr) Pr = mean annual net precipitation (m/yr) David A. Reckhow CEE 577 #8

Data Collection

- Determine total drainage area (A_d) from a GIS database, or USGS maps, using a polar planimeter, or cut paper with squares.
- Estimate the surface area of the lake (A_s). This may also be done by GIS or planimetry using a USGS map, or the cut paper method.
- Estimate annual runoff (r) which is usually expressed in meters/year. This information is generally available from the USGS.
- Determine average annual net precipitation (P_r), also expressed as meters/year. This information can usually be obtained from the USGS or the US Weather Service.

David A. Reckhow

CEE 577 #8

15

Determination of Areal Loading with Uncertainty

- Total phosphorus mass loading (W) as proposed by Reckhow et al. (1980):
 - W = $(Ec_f x Area_f) + (Ec_{ag} x Area_{ag}) + (Ec_u x Area_u) + (Ec_a x A_s) + (Ec_{st} x #capita-yrs x [1-S.R.]) + PSI$

Data Collection

- Estimate land use drainage areas (forested, agricultural, urban).
 - This information may be available from:
 - local planning agencies
 - otherwise it may be obtained from GIS data.
 - For future projections, high and low estimates are needed for assessment of uncertainty
- Choose Export Coefficients for each category.
 - Ranges should be selected for the major sources (often all but precipitation).
 - Choice depends on characteristics of watershed as compared to those previously studied, for which there already exists export coefficients.
 Other factors may play a role such as the use of phosphate detergents (will impact E_{cst}).

David A. Reckhow

CEE 577 #8

17

General P Export Coefficients

• From Reckhow et al. 1980

Source	Symbol	Units	High	Mid-range	Low
Agricultural	Ecag	kg/(ha-yr)	3.0	0.4-1.7	0.10
Forest	Ec_{f}	kg/(ha-yr)	0.45	0.15-0.3	0.02
Precipitation	Eca	kg/(ha-yr)	0.60	0.20-0.50	0.15
Urban	Ecu	kg/(ha-yr)	5.0	0.8-3.0	0.50
Input to septic tanks	Ec_{st}	kg/(capita-yr)	1.8	0.4-0.9	0.3

- Mattson & Isaac (1999)
 - Argue that MA may have a lower P export than the US average

David A. Reckhow

CEE 577 #8

.....

Septic System Calculations

- Estimate SR:
 - This is a number between 0 and 1 that indicates how well the soil and associated plants take up phosphorus. When it is low more of the phosphorus reaches the lake. Factors to consider include:
 - · phosphorus adsorption capacity
 - natural drainage
 - permeability
 - slope
- Estimate number of capita-years on septic systems impacting lake
 - This requires some judgment, but usually a strip of about 20-200 m wide surrounding the lake is considered the zone of influence. All septic systems within this zone would be counted in the following calculation:

David A. Reckhow

CEE 577 #8

19

Data Collection (cont.)

Total # of capita-years

average # of persons per living unit # days spent at unit per year /360 # of living units within zone of influence

- Estimate Point source inputs: possibly from NPDES permits
- Now determine high, low and most likely estimates of W using above equation. These are obtained from high, low and most likely estimates of the various input parameters (note that the low value of S.R. should go with the high estimate of W, and vice versa).

David A. Reckhow

CEE 577 #8

Determine areal loading (L)

- From these three estimates of W, calculate the high, most likely and low estimates for annual areal phosphorus loading
 - $L = W/A_s$
- Evaluate the three estimates of phosphorus concentration

$$P = \frac{L}{11.6 + 1.2q_s}$$

David A. Reckhow

CEE 577 #8

21

Estimate Prediction Uncertainty (sT)

- This requires that the model error be appropriately combined with the uncertainty inherent in the model terms. This is done on log transforms of the model results, using standard error propagation techniques.
 - Model Error
 - positive and negative model errors are calculated separately and not presumed equal.
 - sm+ = antilog[logPml + smlog] Pml
 - sm- = antilog[logPml smlog] Pml
 - Error in Model Terms
 - sL+ = (P(high) P(ml))/2
 - sL- = (P(ml) P(low))/2

David A. Reckhow

CEE 577 #8

Confidence Intervals


- Overall Error
- $s_{T+} = [(s_{m+})^2 + (s_{L+})^2]^{0.5}$
- $s_{T-} = [(s_{m-})^2 + (s_{L-})^2]^{0.5}$
- Confidence Intervals
 - The intervals are 55% for 1 prediction error, and 90% for 2 (based on a modification of the Chebyshev inequality).

55% confidence interval: 90% confidence interval: $(P_{(ml)} - s_{T-}) < P < (P_{(ml)} + s_{T+})$


 $(P_{(ml)} - 2s_{T-}) < P < (P_{(ml)} + 2s_{T+})$

David A. Reckhow

CEE 577 #8

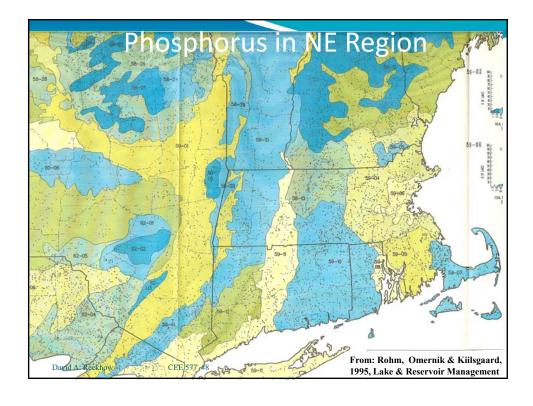

Regional P Description I • 59-10 Most lakes are small and shallow with n = 162590 many being human-made. Landforms predominantly comprise numerous low 70 relief hills rising above the general level of outwash plains. Glacial till is derived from 30 gneiss, schist, and granite. LULC is a mix 20 of central hardwood forest and cropland/pasture. The lack of reliable lake P data in MA coupled with the increased urban/industrial presence of south-central TOTAL PHOSPHORUS (ug/1) MA makes estimates of patterns of P in the ESTMATED northern part of this region difficult. CEE 577 #8 David A. Reckhow

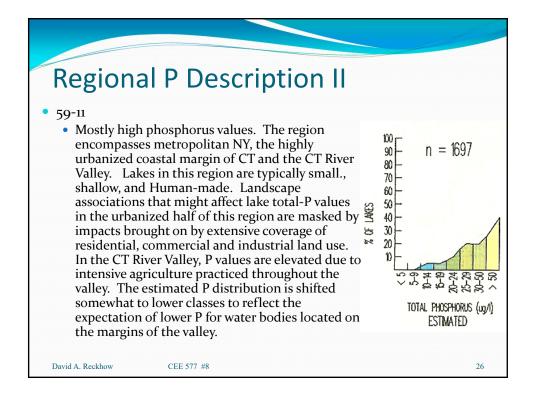

Mattson & Isaac approach

- Generalized model
 - W = $(Ec_f x Area_f) + (Ec_r x Area_r) + (Ec_u x (Area_u)^{o.5}) + (Ec_a x A_s) + (Ec_{st} x #septics)$
- Model calibrated in terms of hectares
 - W (kg/yr) = 0.13(Area_f) + 0.3*(Area_r) + 14*(Area_u)² + 0.5*(# septics)
 - Note that: Area_r = rural area
 - 1 hectare = 2.47 acres = 10,000 m²
- Based on 16 MA lakes,
 - Error for W is estimated at ±36%

From: "Calibration of Phosphorus Export Coefficients for Total Maximum Daily Loads of Massachusetts Lakes" M.D. Mattson & R.A. Isaac, J. Lake & Reservoir Mgmt., 15(3)209-219.


David A. Reckhow


CEE 577 #8

In-lake Management

	Technique	Notes
1	Dredging	removal of sediments
2	Macrophyte Harvesting	mechanical removal of plants
3	Biocidal Chemical	chemicals added to inhibit growth of
	Treatment	undesirable plants
4	Water Level Control	flooding or drying of troublesome areas to control growths
~	TT 1' 4' A 4'	
5	Hypolimnetic Aeration or Destratification	addition of oxygen, and mixing
6	Hypolimnetic Withdrawal	removal of bottom waters low in oxygen and high in nutrients
7	Bottom Sealing/Sediment	obstruction of the bottom by physical or
	Treatment	chemical means
8	Nitrient Inactivation	chemical precipitation or complexation of
		dissolved phosphorus, nitrogen, etc.
9	Dilution and Flushing	increase flow to help "flush out" pollutants
10	Biomanipulation or Habitat	encouragement of biological interactions to
	Management	alter ecosystem processes

Watershed Management							
	Technique	Notes					
1	Zoning/Land Use Planning	Management of land use					
2	Stormwater/Wastewater Diversion	re-routing of wastewater flows					
3	Detention Basin Use and Maintenance	increase time of travel for polluted waters so natural purification processes act					
4		installation of community-level collection syst					
5	<u> </u>	better operation & performance of home septi systems, etc.					
6	Agricultural Best Management Practices	use of improved techniques in forestry, anima crop science					
7	Bank and slope stabilization	erosion control to reduce sediment and associal loadings					
8	Increased street sweeping	frequent washing and removal of urban runof contaminants					
9	Behavioral Modifications						
	a. use of Non-phosphate detergents	eliminates source of P					
	b. eliminate garbage grinders	reduces general organic loading					
	c. minimize lawn fertilization	reduces nutrient loading					
	d. restrict motorboat activity	reduce turbulence and sediment resuspension					
David A. Reckhow	e. eliminate illegal dumping	reduce a wide range of conventional and toxic inputs					

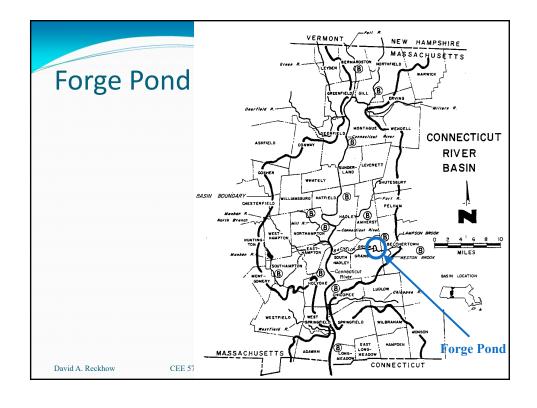

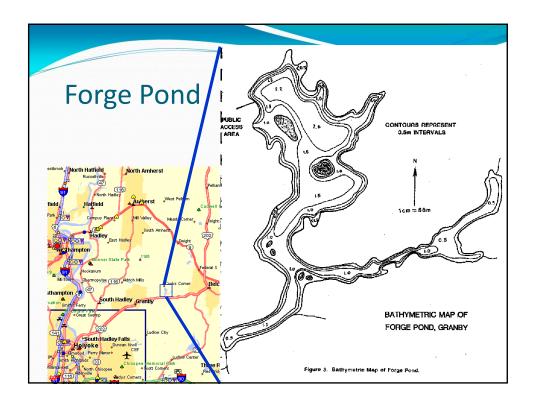





Water color 7-25-88 no big worry MT

GRANBY — A blue-alert on Forge Pond turned out to be a false alarm after a resident notified authorities that he saw a two-acre patch of blue on the water.

The resident, Roger Fleury of 9 Forge Pond Road, was out boating on the pond Saturday when he detected the blue patch, Fire Department Chief David Seiffert said.


Mark Haley of the Department of Environmental Quality Engineering investigated, but the color turned out to be an unusual reaction that occurs every year at the 70-acre pond. He could not elaborate.


Haley said he was referring the case to water pollution control officials at DEQE.

Holyoke Transcript-Telegram

David A. Reckhow

CEE 577 #8

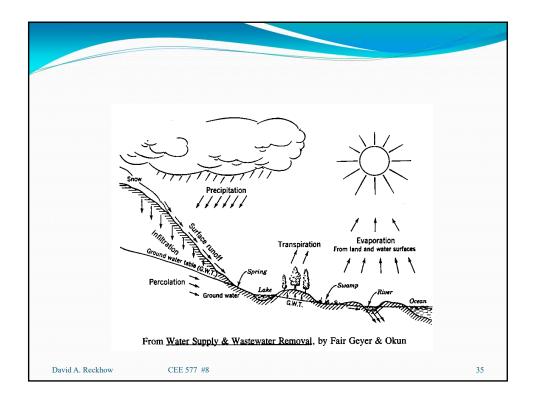

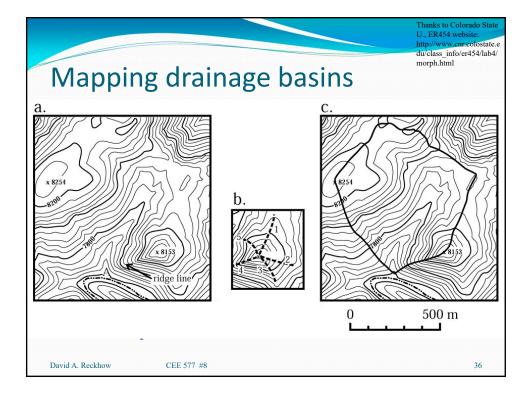


From: Colorado State U., ER454 website: http://www.cnr.eolostate.e du/class_info/er454/lab4/ morph.html

37

Basin Delineation (cont.)

• Consider Figure 1a and suppose we wish to draw a line enclosing the drainage basin of the stream whose mouth lies at 'A'. Beginning at the mouth we can proceed to the east or west. Notice that to the east a narrow ridge rises toward a peak. Runoff on the west side of the ridge will flow through the mouth at "A" whereas water to the east will flow down a hillside and into another stream. The ridge line is a obvious drainage divide, therefore we can begin drawing our perimeter line by tracing its crest. After reaching the peak, you should follow once again follow a ridge. Ridges are most easily recognized as a series of bent contour lines whose apex point downhill. Note that five ridges converge at the peak (Figure 1b). Choosing the correct ridge is simply a matter of determining which ridge sheds water into the stream of interest and a different stream. Of the 5 ridges in Figure 1b, ridge 4 has already been chosen as a drainage divide. Water shed by ridge 5 will flow into two different basins, but both of these basins ultimately drain to "A". Ridges 2 and 3 separate basins that do not drain to "A". Thus, we find that ridge 1 marks the eastern side of the drainage basin. Tracing the rest of the perimeter is now a matter of choosing the correct ridges (Figure 1c).

David A. Reckhow CEE 577 #8

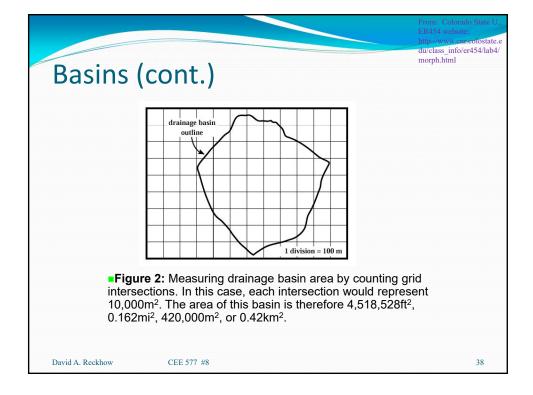



Basins (cont.)

To measure area, one would ideally use a digitizer and simply trace the outline of a given basin. This procedure is as accurate as the digitizer and its user. Alternate means include overlaying a basin outline on a sheet of squares or dots. By counting the squares, intersections, or dots, each of which represents a given area, one can determine the area of a basin with modest accuracy. We will estimate basin area using graph paper with 10 divisions per inch. Furthermore, we will count the number of line intersections within a given basin (see Figure 2). We will assume that each intersection represents an area equivalent to a 1/10" by 1/10" square. Using this method, the area of the basin in Figure 2 is calculated as 0.42 km². We can cross-check this value using a digitizing tablet. Doing so yields an area of 0.425 km2. The grid intersection method yielded a fair approximation of the area, but is entirely less satisfactory when areas are small relative to the fineness of the grid.

David A. Reckhow

CEE 577 #8

